
VENCO

ALCOVE SHOWERS|UNIVERSAL SERIES

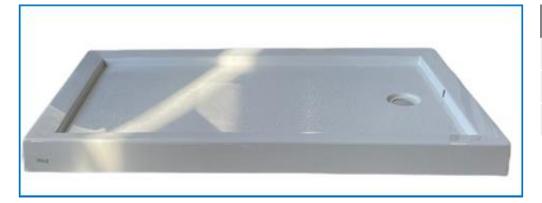

MODEL | UNI6032EDB| ACRYLIC

SPECI	FICAT	
JECI	ILCAI	10112

LENGTH:	59 ³ /8" or 31 ¹ /2"
WIDTH:	31 ¹ /2" or 59 ³ /8"
HEIGHT:	3″

SHIPPING WEIGHT: 45 LBS*

* Approximately

Design Features

- Textured bottom
- End drain
- Multiple configurations possible

UNIVERSAL SERIES

Product Specifications


- 100% acrylic with fiberglass & wood reinforcement
- Separate flange kit for universal installation
- Flange Kit included with the shower as per customer. choice and should be mentioned at the time of purchase.
- Leveling feet included.
- End drain hole: 3"
- 5 Year limited manufacturer's warranty included.





ALCOVE SHOWERS | UNIVERSAL SERIES

MODEL | UNI6032EDB | ACRYLIC

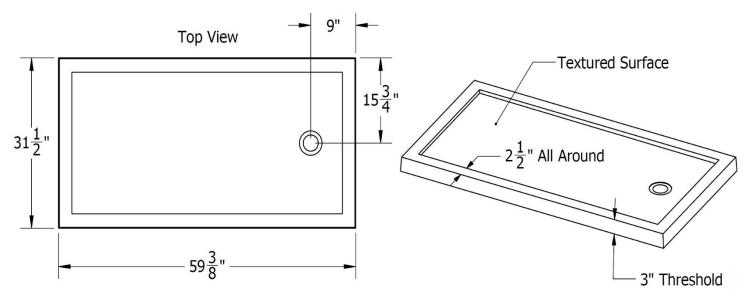

Note: ALL THE MEASUREMENTS ARE IN INCHES & HAVE TOLERANCE OF \pm ¹/₄"

IMPORTANT

While we strive to provide accurate measurements for our customers, sometimes mistakes happen.

Our goal is to help things run smoothly from shipment to installation, so if you notice any errors in our spec sheets, please let us know.

Our products are handmade & hand finished so you can expect a tolerance of \pm ¼" on all measurements. We strongly recommend waiting until your ordered product is on-site before attempting any rough-in carpentry or plumbing.

If you want to verify any of our measurements, please feel free to call or email us. Keeping with our policy of continuing product improvement, Venco Products Ltd. reserves the right to change product specifications without notice.






2

Venco Products Ltd. (Delta) 7584 Vantage Place, Delta, BC V4G 1A5 Tel: (604) 940-4960 sales@venco.ca

Venco Products Ltd. (Nanaimo) 1960 Cedar Road, Nanaimo, BC V9X 1W1 Tel: (250) 722-2522 islandsales@venco.ca

MODEL | UNI6032EDB | ACRYLIC

Type of Installation:

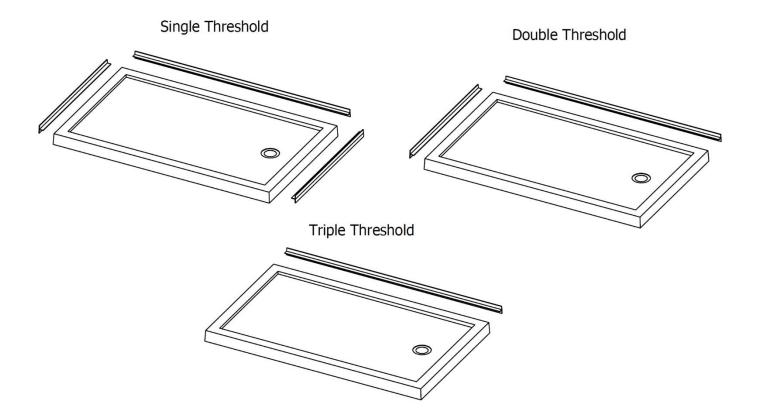

Tiling Flage Installation Instructions:

- 1. Take out the protective plastic sheet from shower base.
- 2. Drill pilot holes in flange & acrylic base before installing screws.
- 3. Install tiling flange on the outer wall of the base using 1'' screws.
- 4. Ensure that silicone is beaded around flange area.



VENCO.CA

Venco Products Ltd. (Delta) 7584 Vantage Place, Delta, BC V4G 1A5 Tel: (604) 940-4960 sales@venco.ca

Venco Products Ltd. (Nanaimo) 1960 Cedar Road, Nanaimo, BC V9X 1W1 Tel: (250) 722-2522 islandsales@venco.ca